 


Here are the steps to open the model and load the Alt 2 AM & PM scenarios properly:


1. The “Alt 2\_2050\_10 Runs.zip” contains the final Alt 2 files. Unzip this into a folder.



2. Open the “I-526 LPR IMR” project file (or drag the file to the software window). Note it’s not the same as the input file ending with .inpx because we used scenario manager.



3. Double-click “24: 2050 Alt 2 AM – For IAR” or “25: 2050 Alt 2 PM – For IAR” under Scenarios in Project Explorer at the top left corner. After this, all the inputs including volumes and outputs for Alt 2 AM or Alt 2 PM should be loaded.

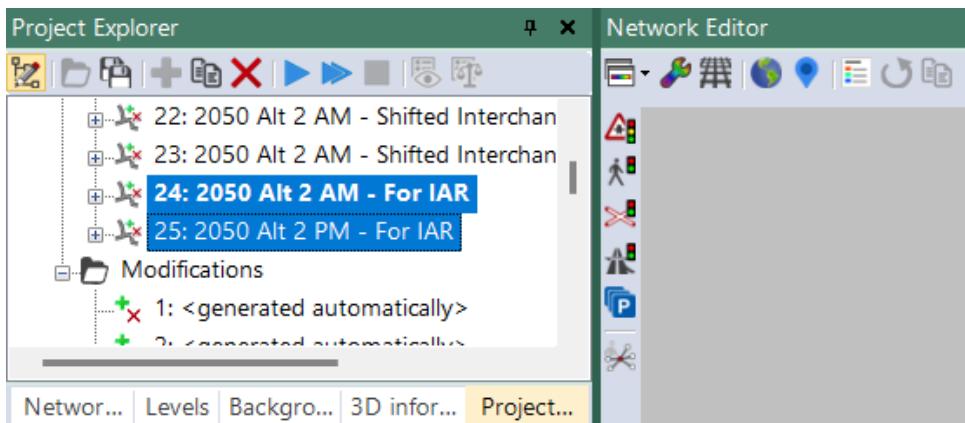

Note: This Vissim model was developed using an earlier version of Vissim. If you open it with the latest version, there would be a prompt asking to overwrite RBC (signal controller) files. Accept to overwrite supply files.