



South Carolina  
Department of Transportation

955 Park Street  
Post Office Box 191  
Columbia, South Carolina 29202-0191

Office of the Director  
(803) 737-1302 ♦ Fax (803) 737-2038

Deputy Director of Engineering  
(803) 737-1314 ♦ Fax (803) 737-2038

Deputy Director of Finance and Administration  
(803) 737-1240 ♦ Fax (803) 737-1719

Deputy Director of Mass Transit  
(803) 737-9720 ♦ Fax (803) 737-9739

November 24, 1997

### INSTRUCTIONAL BULLETIN NO. 97-10

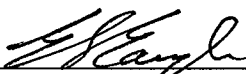
**SUBJECT:** Relocated Centerlines  
**EFFECTIVE DATE:** November 26, 1997  
**SUPERSEDES:** None  
**RE:** None

When it is necessary to relocate the roadway centerline of a project, new points for the relocated PC, PI, PT, and POT's should be determined and shown on the plan's Reference Sheet. These new points should be identified as relocated points. Each point will be identified by xyz coordinates on the Reference Sheet and shown on the plan sheet as "Relocated PC", etc. with stationing. This procedure is in lieu of providing station-offsets for the relocated points. Use the new coordinate description on all future work. A note should be placed on the plan sheet to bring attention to the relocation and should read as follows:

**Relocate centerline between  
Sta. \_\_\_\_\_ and Sta. \_\_\_\_\_.**

A set of plans with only one or two plan sheets typically will not have a Reference Sheet due to the simple nature of the plan sheets themselves. It will be necessary to show the relocation notes and references on the plan sheets themselves.

Approved: \_\_\_\_\_

  
E. S. Eargle  
Road Design Engineer

ESE:adf

cc:

Federal Proj. Dev. Engr. Pratt  
"C" Proj. Dev. Engr. Kneece